


Scan to view Product Instructional Video  
or go to url:  
[www.creativeDisplaysite.com/Econo24.html](http://www.creativeDisplaysite.com/Econo24.html)



**Product Parts**

- 1 - Base
- 2 - Banner Rail
- 3 - Shock Cord Pole
- 4 - Pin

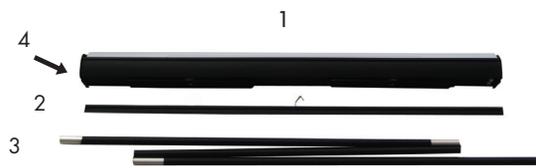

**\*Do Not Pull Pin Until Directed**



## Banner Install




### Step 1

Remove all parts from the bag. Place the banner on a clean, flat surface.





### Step 2

Remove both End Caps (A) from the Banner Rail and snap the Banner Rail (3) open. Fully insert the top edge of the Banner into the groove of the Banner Rail (3) and snap it shut (B).

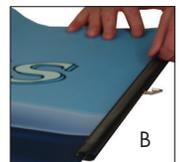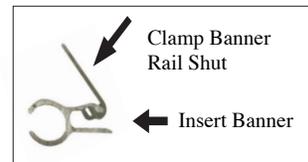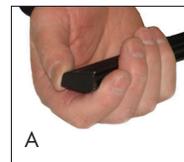

### Step 3

Lay the banner flat, printed side up. On the Base (1) remove the strip of protective paper to expose the adhesive (A). Firmly and evenly press the bottom of the banner (B) onto the adhesive, and be sure to smooth out any bubbles or wrinkles (C).

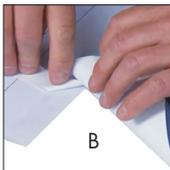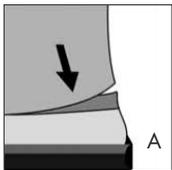

### Step 4

Maintain tension on the banner while slowly removing the Pin (4). Allow the banner to gently roll into the canister.



**\*\*Store the Pin on the base for future graphic changes.**



### Step 5

Once the banner has been fully retracted into the Base, simply place the display in the carrying case until you are ready for display set-up.

## Display Set-Up

### Step 1

Remove the display from the carrying case and place at your desired location



### Step 3

Insert the Shock Cord Pole (2) into the hole in the center of the base. Ensure the pole is seated completely into the bottom half circle cutout.



### Step 2

Flip the Base (1) upside down and rotate the foot to sit perpendicular to the Base.



### Step 4

While facing the back of the Display, gently pull the Banner Rail upwards and clip the hook into the opening located on the Pole.

Once set, your display is complete and ready for use.



## Storage

Place all product parts into Carry Case and store in a cool dry location.



## Care

To clean, wipe with damp cloth.

*Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.*